



**\*\* If your Vault is not reaching proper temp (between 23\* - 33\* F.) make sure the below settings are in place\*\***

### **Temperature Set Point**

- 1) Press "Set" button.
  - The temp displayed is (compressor stop temp)
- 2) Adjust using UP & DOWN arrow to 23\*
- 3) Press "Set" button when completed.

**Once completed, follow below steps to adjust set limits.**

### **Set Point Limit**

- 1) Hold "Set" Button for 6 seconds to enter the parameter setup mode.
  - E1 will flash at this time
- 2) Adjust using UP & DOWN arrow to 23\* (Lower Set Point Limit)
- 3) Press "Set"
  - E2 will flash at this time
- 4) Adjust using UP & DOWN arrow to 34\* (Higher Set Point Limit)
- 5) Press "set" one more time to complete and E3 will flash, no other steps are needed at this time.
  - After 6 seconds it will exit screen and show current temp.

**Leave unit for 30 mins while it obtains proper temperature.**