


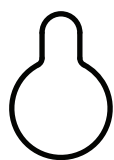

Mounting Template






Screw kits:


Key	1 pc
Screw	4 pcs
Plastic wall anchors	4 pcs

Tools:

Protective Eyewear
Power Drill with appropriate drill size
Pencil
Screwdriver
Tape Measure




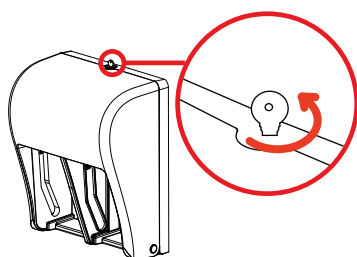
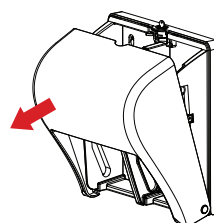
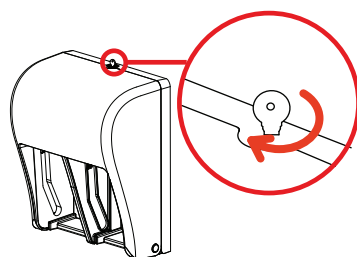


Keyed Operation

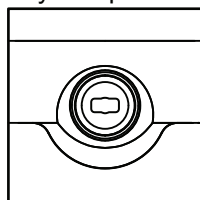

Push Button Operation

Or

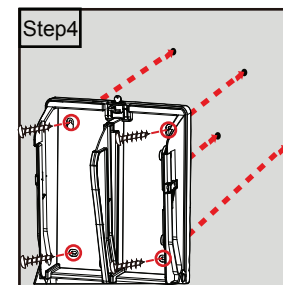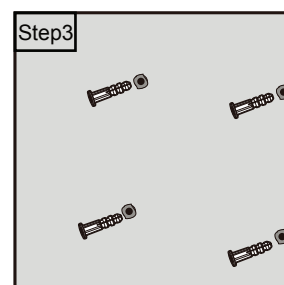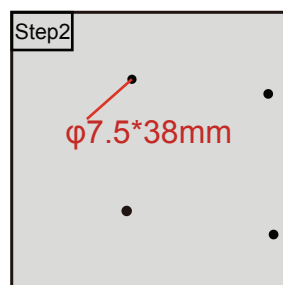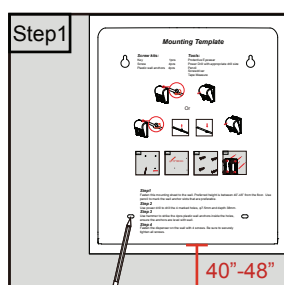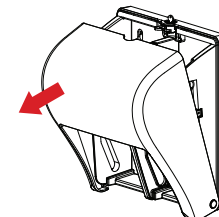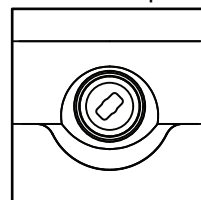

Step 1

Fasten this mounting sheet to the wall. Preferred height is between 40"-48" from the floor. Use pencil to mark the wall anchor slots that are preferable.

Step 2

Use power drill to drill the 4 marked holes, $\phi 7.5\text{mm}$ and depth 38mm.

Step 3

Use hammer to strike the 4pcs plastic wall anchors inside the holes, ensure the anchors are level with wall.

Step 4

Fasten the dispenser on the wall with 4 screws. Be sure to securely tighten all screws.

Notes: please use the provided screw kits.

